



Conventional Gas Sensor SG-O₂ 100



Always careful to the requirements of a highly technological market and exigent of modernity, the **BEINAT S.r.I.** has designed a gas probe detection destined to an installation both for residential environments that industrial environments. In fact, the new stand-alone probe $SG-O_2100$ has the prerogative to control through sensors catalytic technology the presence of **OXYGEN**

The probe is managed by a microprocessor which not only supplies an alarm signal to the control unit connected to it, but also allows execution of a self-diagnosis and therefore an **automatic calibration**, in order to always have the maximum detection accuracy.

The self-calibration allows the probe to adapt in difficult environments and variable temperature avoiding false alarms due to anomalous events.

The probe integrates the transmission of the gas being monitored through:

Analog output signal 4 ÷ 20 mA.

Furthermore with this probe it is possible:

1) To SELECT the alarm threshold for: oxygen excess or deficiency.

1) To SELECT the positive safety of the relay.

Indispensable instrument for the annual check of the probes Instrument of testing TS1008

To facilitate the reading of the functional parameters of the probe as well as the control of annual operating, the **BEINAT S.r.I.** has built a new portable tester **TS1008**.

The tester allows to read all the data in the memory of the probes eand by serial transmission, it prints the ticket that confirms the testing data.





Important: Assembly / maintenance of the appliance must be carried out by qualified personnel and in accordance with applicable laws and regulations.

The manufacturer assumes no responsibility for the use of products that have to comply with particular environmental and / or installation standards.



This equipment is designed to protect people from the acute effects of exposure to Oxygen. This equipment does not fully protect people with specific medical conditions. In case of doubt consult a Doctor



Important note

Before connecting the equipment, it is recommended that you read the instruction manual carefully and keep it for future reference. It is also recommended to perform the electrical connections correctly as per enclosed drawings, observing the instructions and the Standards. N.B. Refer to the documentation in all cases where the symbol is on the side



CONFORMITY

EN 50104 EN 50270 Compliant EN 60079-29-1 Installation EN 60079-29-2 Reports issued by TUV I talia



CHECK the integrity of the probe after having removed it from the box. Check that the data written on the box correspond to the type of gas used. When doing the electrical connections, follow the drawing carefully. Every different use from that for which the probe has been projected is improper, for which **BEINAT S.r.I.** disclaims every responsibility for possible damages caused to people, animals or objets.

TERMS and EXPECTATIONS: The installation of the SG-O₂100, its ordinary and extraordinary maintenance, and its out of service removal at the end of the functional life guaranteed by the manufacturer, must be carried out by authorized and/or specialized personnel.

INSTALLATION

During installation, remember that the container **must not** be pierced by anywhere, entail loss of degree of protection. **Do not allow it to become wet.**

The probe can be seriously damaged when immersed in water. Remember that the probe has an **IP55** protection degree. **Do not drop it.**

Heavy knocks or falls during transportation or installation can damage the appliance.

Avoid abrupt temperature fluctuations.

Sudden temperature variations can cause condensation and the probe could work poorly. Cleaning

Never clean the device with chemical products. If necessary, wash with a moist cloth. Absolutely avoid using any cloth dipped in thinners, alcohol and chemical detergents.

MAINTENANCE

The user periodically (every 6 months) must perform a check of the operation of the control unit by spraying a suitable test gas at the base of the probes connected until the alarm condition is reached.





At least once a year make a more accurate check by a specialist technician.
Disabling the detector must be carried out by qualified personnel.

Technical specifications

Power supply Power demand Relay switching alarm	
Selection of positive safety Green: Op Fault	perating, Red: Flashing: detecting gas, Steady Alarm, Yellow:
Type of gas detected Integrated sensor according to the type of gas Operating range of the sensing element	OXYGEN Optical Fluorescence 0 - 25 % of 02
Operating range selectable by switch	
Detector accuracy Long term shift in clean air Auto zero procedure Response Time	+/- 1% FS
Functioning humidity Functioning temperature	0-90% not condensed -30°C to +60°C
Control units usable GS300-I	Mc, BX444-Mc, BX308xp,BX308xp/Box, BX316xp, BX316xp/Box
Cable diameter for connecting probe Section shielded cable transmission distance up to 50 Connection: The cable of connection of the prob Otherwise, make sure to use a shielded cable	00 meters 500mt 3 x 1 e must not be installed together with the power cables.
Installation Enclosure	

 Compatible control units

CONTROL UNITS	MOUNTING	PROBES Max.	DEGREE	PRE	ALARMS	POSITIVE	OPERATING
			protec.	alarms		SAFETY	RANGE
GS300-MC unit 1 zone	Wall/cabinet	3	IP44	2	1	YES	NO
BX444-MC unit 1 zone	Wall/cabinet	4	IP44	2	1	YES	NO
BX308 unit 1 zone	Omega bar DIN	N 8	IP20	1	1	YES	YES
BX308/Box unit 1 zone	Wall	8	IP65	1	1	YES	YES
BX316 unit 2 zones	Barra Omega	16	IP20	1	2	YES	YES
BX316/Box unit 2 zones	Wall	16	IP65	1	2	YES	YES

Dimensions



The installation of the detector is not exempt from The compliance with all regulations concerning the characteristics, installation and use of gas appliances. The ventilation of the spaces and the elimination of combustion products are described in the UNI norms according to ART. 3 LAW 1083 / 71 and relevant legal provisions.

The positioning of the probe is an important factor for the correct functioning of the gas detection control unit. In order to obtain the maximum results from an appliance and minimize the probabilities of false alarms, we recommend to follow this diagram and to keep in mind the following general rules. The probe should be placed at a height of about 1.60 cm from the ground, if the height of the room should be higher is recommended to install it at an average height between ceiling and floor.

- Average height environment to detect: volatile gases Oxygen.

- The probe **should not be affected** by smoke, vapour, etc. as they could distort their measurement. It must be placed away from sources of heat, suction fans, ventilation fans





Gas Input Test



The installation of the **SGO**₂**100** probe, its ordinary and extraordinary maintenance, and its out of service removal at the end of the functional life guaranteed by the manufacturer, must be carried out by authorized or specialized personnel.

The general test should be performed by issuing gas from a pre-calibrated bottle within the percentages illustrated on the side

Important: This test must be carried out at least once a year.

WARNINGS and technical features of the detecting sensor

WARNING !!

The service life of the sensor technology "Optical fluorescence" in clean air is on average 5 years. At the end of this period indicated by the yellow led on, it is necessary to replace the sensor.

Periodic checks: it is strongly recommended to perform at least every 6 -12 months the operating test of the detector as described in the section above "Gas Input Test"

Note:

The probe is not able to detect the concentrations of O_2 that occurring outside the room where it is installed Operating temperatures from -30 ° C to + 60 ° C.



N

Troubleshooting before calling a technician

If the device does not start up.

Check that the 12+24 VDC power is present, and that positive and negative polarity has not been inverted. If the Fault LED lights up.

If the fault signal reaches the control unit connected to the probe.

Check that the cables are connected according to the drawing, and that the wire isolation sheath has not been pinched. Check the voltage at the terminals 1-2. It must be higher than 11 VDC and lesser than 25 VDC.

Check the voltage at the terminals 2-3. It must be from a minimum of 0.8 VDC to a maximum of 1.1 VDC.

WARNING

These measurement should be performed in clean air. Moreover, this test must be performed only with the probe connected to a control unit, or with a 220 Ohm resistance installed between terminal 2 and terminal 3.



If other problems arise, a specialised and/or authorised technician and/or the Distributor of **BEINAT S.r.l.** should be contacted directly.



WARNING.

Before connecting to the mains power, ensure the voltage is correct. Carefully follow the instructions and the connections according to Regulations in force, keeping in mind that **the signal cables should be laid separate from the power cables**.



Functioning of the Tester TS008

Connecting the tester **TS1008** it is possible to proceed to the control of the probe and print the test report.

20

Legend of display

ADC 80 16 (125 145)		Sansar
probe sg-0 ₂ 100	Display "ADC" shows the decimal value of the capsule and the type of "GAS"	Analyz
sn 24ad12	Displays the type of probe.	LEI
date 15 2014	Displays the serial number,	
$D_{2}V_{2}100$	Displays the manufacture date,	E
	Displays the remaining days at the end of the operating	En
cy 5	cycle.	UP
al 15	Displays how many times the probe has been turned on.	
d: 61 10	Displays how many times is gone into alarm	
	Displays how many corrections have been done	
range 20	Displays the operating range if at 20 or at 100% of LEL	
lel 20% (fault)	Displays the percentage of dispersed gas Displays if the probe is in fault	
print	Indicates if you want to print the ticket	
tor	Indicates if you want to reset the probe to the data factory.	181008
lai	Asks to save the modified data	
new save	Indicates when the battery is low	
low bat		

The oxygen " O_2 " is an odorless gas, colorless, slightly heavier than air (has density relative to the air of 1.1).

It is not a flammable gas but being a strong oxidant, it reacts with combustible and reducing materials causing risks of fire and explosion because it enhances the combustion.



The oxygen is the 20,95% of the air we breathe.

DEFICIENCY

If the concentration of the O_2 in the air drops below **19.5%**, it is considered deficient for health of people, then if the concentration drops below **16%**, it causes breathing problems until to cause the asfisia and below **6%**, it causes the immediate death.

To keep in mind that the oxygen deficiency can be caused by phenomena of combustion, from the increase in the air of other gas (toxic and / or flammable), but also from the leaks of inert gases (nitrogen, helium, argon, etc.).

EXCESS

At high concentrations, **over 24%**, **the** O_2 is irritating to the respiratory tract and can cause effects on the central nervous system, the eyes and the lungs, which can be damaged by the inhalation of high concentrations.

In any case, open doors and windows to increase the ventilation. If the alarm continues and the cause can not be identified leave the bulding and, from the outside, to call emergency services. Warning!!

If you have symptoms of vomiting, sleepiness or other, go to the nearest **emergency** medical service warning the doctor that the cause may be due to the **deficiency or excess of oxygen**





INSURANCE. This device is insured by the SOCIETÀ REALE MUTUA for the PRODUCT'S GENERAL LIABILITY up to a maximum of 1,500,000.00 EURO against damages caused by the device in case of failures in functioning.

WARRANTY. The warranty term is 3 years from manufacturing date, in agreement with the following conditions. The components acknowledged as faulty will be replaced free of charge, excluding the replacement of plastic or aluminium cases, bags, packing, batteries and technical reports.

The device must arrive free of shipment charges to BEINAT S.r.I.

Defects caused by unauthorized personnel tampering, incorrect installation and negligence resulting from phenomena outside normal functioning shall be excluded from the warranty. **BEINAT S.r.I.** is not liable for possible damage, direct or indirect, to people, animals, or things; from product

faults and from its enforced suspension of use.





DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT.

This symbol on the product or its packaging to indicates that this product shall not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment, such as for example:

the applicable collection point for the recycling of electrical and electronic equipment, such as for example: - sales points, in case you buy a new and similar product - local collection points (waste collection center, local recycling center, etc...) By ensuring this product is disposed of correctly, you will help prevent potential negative consequence for the environment and human health, which could otherwise be caused by inappropriate waste handing of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Attention: In some countries of the European Union, the product is not included in the field of application of the National Law that applies the European Directive 2002/96/EC and therefore these countries have no obligation to carry out a separate collection at the rend of life" of the product.



Sensor	SG-	0	1	0	0
		2		<u> </u>	<u> </u>

Lo styling è della b & b design

Purchase date:	Stamp and signature of the dealer
Serial Number :	
The Beinat S.r.I. following the targhet to improve its products, reserves the functional any time without prior notice.	he right to modify the technical features, aesthetic and

BEINAT S.r.l. Via Fatebenefratelli 122/C 10077, S. Maurizio C/se (TO) - ITALY Tel. 011.921.04.84 - Fax 011.921.14.77 http:// www.beinat.com



Business - info@beinat.com Help Desk - laboratorio@beinat.com