




Conventional Gas Sensor SG544

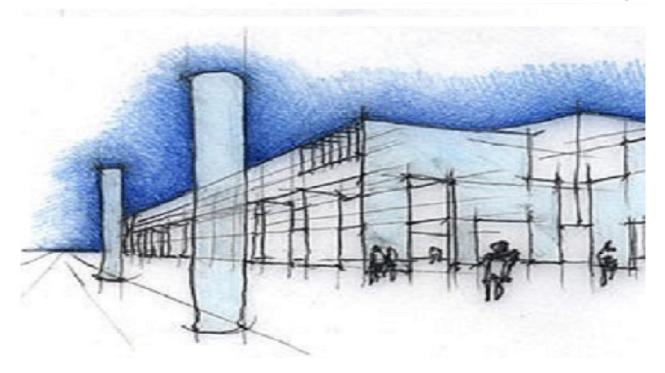

The **SG544**is born from the elegance and prestige that has always distinguished **BEINAT S.r.I.** and from the home fitness concept.

The probe is a Catalytic gas detection unit with **IP44** protection that, together with one of BEINAT's industrial type Control Units, detects the presence of **esplosive gas** such as Methane, LPG.

The sensor provides a signal of alarm to the control unit to which it is connected with a sensitivity of intervention calibrated within 20% of the LEL.

The degree of protection that is provided allows the useeven in critical conditions of moisture, dusty environments and where the norms require, making it ideal for its use in industrial environments.

The probe has a linear output 0 to 20% LEL, working with the standard 4 to 20 mA.



Important: Assembly / maintenance of the appliance must be carried out by qualified personnel and in accordance with applicable laws and regulations.

The manufacturer assumes no responsibility for the use of products that have to comply with particular environmental and / or installation standards.



Important note

Before connecting the equipment, it is recommended that you read the instruction manual carefully and keep it for future reference. It is also recommended to perform the electrical connections correctly as per enclosed drawings, observing the instructions and the Standards. N.B. Refer to the documentation in all cases where the symbol is on the side

w.b. Refer to the documentation in an eases where the symbol is on the

Installation and user guide

CONFORMITY EN 50194 EN 50270 Compliant EN 60079-29-1 Installation EN 60079-29-2 Reports issued by TUV I talia



Precautions

CHECK the integrity of the unit after having removed it from the box. Check that the data written on the box correspond to the type of gas used. When doing the electrical connections, follow the drawing closely. Any use of the detector for purposes other than the intended one is considered improper, and as a result of which **BEINATS.r.I.** therefore disclaims any responsibility for possible damages caused to people, animals or objects.



TERMS and EXPECTATIONS: The installation of the SG544 Probe, its ordinary and

extraordinary maintenance, every six months, and its out of service removal at the end of the functional life guaranteed by the manufacturer, must be carried out by **authorized or specialized personnel**.

Do not allow it to become wet.

The control unit can be seriously damaged as it is not waterproof either when immersed in water or exposed to high levels of humidity.

Do not drop it.

Heavy knocks or falls during transportation or installation can damage the appliance.

Avoid abrupt temperature fluctuations.

Sudden temperature variations can cause condensation and the control unit could work poorly.

Cleaning

Never clean the device with chemical products. If necessary, wash with a moist cloth.

Technical Specifications

Power Supply Power Demand	
Sensor Sensor range of measurement Detector range of measurement Detection Output Accuracy Long term shift in clean air LELWarm-up time	0 - 100% of L.Ĕ.L. 0 ÷ 20% of L.E.L. Gas Methane, LPG 4mA - 20mA standard tolerance +/- 1%
Control units that can be used BX444-Mc, BX449F, GS100M, BX280, BX Functioning Humidity	0-90% non condensed
Functioning Temperature	
Max. distance between probe and unit Connection cables diameter Connection: The probe connection cables should not be laid with the supp If the cables are laid together with power cables, you must use a shielder	
Degree of external protection Probe's body material Size	IP44 ABS self-extinguishing

Code	Type of Gas	Sensor	Working range	Temperature
SG544met	Methane	Catalytic	LEL 0-100%	-10+50°C
SG544lpg	LPG	Catalytic	LEL 0-100%	-10+50°C

WARNING!

The CATALITIC sensor has a life span of 5 to 6 years in clean air.

The working temperature of the probe recommended is from -10 $^\circ$ C to + 50 $^\circ$ C.

Every puffy snapshot of gas over 100% of L.I.E. Takes months off the sensor.

Each immediate puff of gas that exceeds 100% of L.E.L. takes away months of life from the sensor.

The detector must be tested by simulating the presence of gas by issuing it from a pre-calibrated testing aerosol. **Important**:

The test of operation and eventually offset cancellation must be performed at least **once a year**, by a qualified technician.

Compatible control units


CONTROL UNITS	Mouting	Sensors	Degree protec.	Pre- alarms	Alarms	Positive Safety	Operating range
GS100M unit 1 zone	Wall/cabinet	1	IP44	2	1	YES	NO
GS300M unit 1 zone	Wall/cabinet	3	IP44	2	1	YES	NO
GS300Mc unit 1 zone	Wall/cabinet	3	IP44	2	1	YES	NO
BX444-MC unit 1 zone	Wall/cabinet	4	IP44	2	1	YES	NO
BX150 unit 1 zone	Panel	1	IP42	1	1	YES	NO
BX180 unit 1 zone	Omega bar DIN	1	IP20	1	1	YES	NO
BX280 unit 1 zone	Omega bar DIN	2	IP20	1	1	YES	NO
BX449F unit 1 zone	Omega bar DIN	4	IP20	1	1	YES	NO
BX308xp unit 1 zone	Omega bar DIN	8	IP20	1	1	YES	YES
BX308xp Box unit 1 zone	Wall	8	IP65	1	1	YES	YES
BX316xp unit 2 zones	Barra Omega	16	IP20	1	2	YES	YES
BX316xp Box unit 2 zones	Wall	16	IP65	1	2	YES	YES

MAINTENANCE

The user periodically (every 6 months) must perform a check of the operation of the control unit by spraying a suitable test gas at the base of the probes connected until the alarm condition is reached.

- At least once a year make a more accurate check by a specialist technician.
 - Disabling the detector must be carried out by qualified personnel.



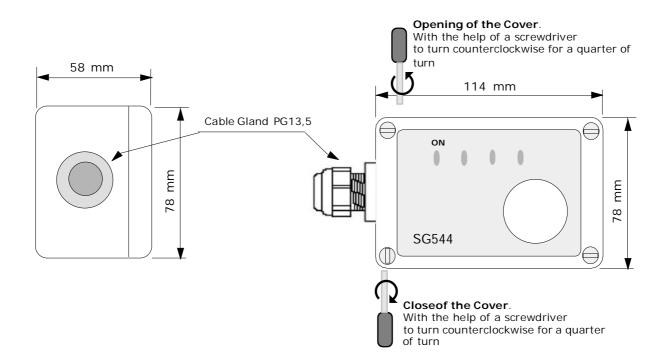

The installation of the detector is not exempt from The compliance with all regulations concerning the characteristics, installation and use of gas appliances. The ventilation of the spaces and the elimination of combustion products are described in the UNI norms according to ART. 3 LAW 1083 / 71 and relevant legal provisions.

The probes must be selected with an "IP" degree of protection depending on the area to be controlled (Kitchens, Boiler rooms, Laboratory, Factories, etc.) by choosing one of the probes produced by Beinat that goes from IP30 to ATEX.

The GAS sensors connected to this equipment are of various types and must be positioned at different heights depending on the type of gas to be detected.

These heights are:

- 30 cm. from the lowest point of the floor to detect:

- 30 cm. from the highest point of the ceiling to detect:

heavy gases (G.P.L., etc.) light gases (Methane etc.)

It is important to remember that the remote probes must be installed keeping in mind that:

1) The probes must not be installed near the appliance to be controlled, boiler, burner, industrial kitchens, etc.) but on the opposite side.

2) The probes must not be affected by fumes, vapors, and by sources of moving air, which could distort the detection.


3) The probes must not be installed near sources of heat, fans or vacuum cleaners.

NOTE. Recall that the GAS detection sensors placed inside the probe are perishable components, whose average duration is variable 5 years therefore after this period it is good to replace them.

Maintenance


The user is kept periodically (every 6 months), to perform a verification of the operation of the detection system by spraying specific test gas to the connected probes, until the alarm status of the control unit is obtained. a) Once a year, a more thorough check must be carried out by a specialized technician.


b) The removal of the probes after 5 years from installation must be carried out by qualified personnel.

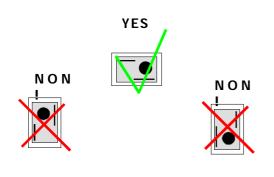




Detection Diagrams Data

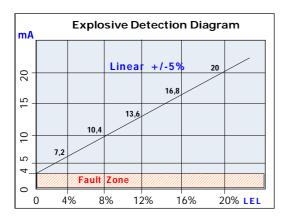

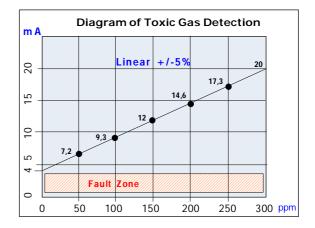

WARNING Before connecting to the mains power, ensure the voltage is correct. Carefully follow the instructions and the connections according to Regulations in force, keeping in mind that the signal cables should be laid separate from the power cables.

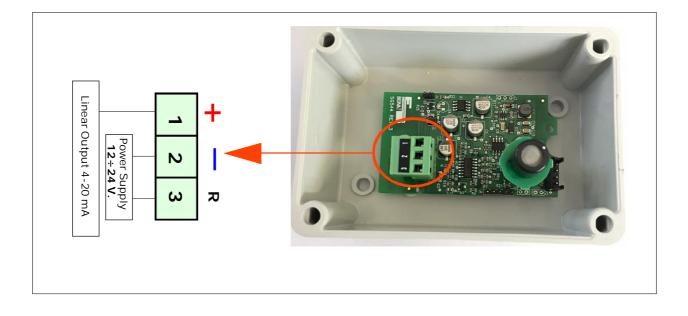

Attention!!

The regulations described in this paragraph must performed be authorized and specialized technician are suceptibile to compromise the safety of the survey.


If the device does not start up.

Check that the **12/24VDC** mains power is correctly connected, and that positive and negative polarity has not been inverted.

If the Fault LED lights up.

If the fault signal reaches the control unit connected to the probe. Check that the cables are connected according to the drawing, and that the wire isolation sheath has not been pinched.

Check the voltage at the terminals 1-2. It must be higher than **11VDC** and lesser than 25Vdc. Check the voltage at the terminals 2-3. It must be from a minimum of 1 **VDC** to a maximum of 1.6 **VDC**

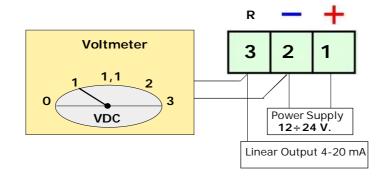

If other problems arise, a specialised and/or authorised **technician** and/or the **Distributor** of **BEINATS.r.I.** should be contacted directly.

Gas Imput Test TEST SG544 Methane Al 20% del L.I.E. ±2% LPG Al 20% del L.I.E. ±2% Hydrogen Al 20% del L.I.E. ±2% Gas Other state

The installation of the **SG544** probe, its ordinary and extraordinary maintenance, and its out of service removal at the end of the functional life guaranteed by the manufacturer, must be carried out by authorized or specialized personnel.

The general test should be performed by issuing gas from a precalibrated aerosol.

According to the $EN\ 60079\text{--}10$ Norm, this functioning test should be performed at least once a year.

WARNING! Actions to be taken in case of alarm

Gas

1) Put out all free flames.

2) Close the main gas tap or the LPG cylinder tap.
 3) Do not turn any lights on or off; do not turn on any electrical device or appliance.
 4) Open windows and doors in order to increase ventilation.

If the alarm stops, its cause must be found and the relevant consequent measures taken.

If the alarm continues and the cause of gas presence cannot be found or removed, abandon the building and call

the emergency services when outside (fire department, distributors, etc.) **IMPORTANT:** The operation test should not be carried out with the gas tap as this does not guarantee a sufficient concentration to activate the general alarm.

Warning !!

If you have the following symptoms: vomiting, sleepiness, or else, go to the closest first aid station / and inform the operators that you could have been poisoned by Carbon Monoxide, or by an excess or deficiency of oxygen





1 k

INSURANCE. This device is insured by the SOCIETÀ REALE MUTUA for the PRODUCT'S GENERAL LIABILITY up to a maximum of 1,500,000.00 EURO against damages caused by the device in case of failures in functioning.

WARRANTY. The warranty term is 3 years from manufacturing date, in agreement with the following conditions. The components acknowledged as faulty will be replaced free of charge, excluding the replacement of plastic or aluminium cases, bags, packing, batteries and technical reports. The device must arrive free of shipment charges to BEINAT S.r.I.

Defects caused by unauthorized personnel tampering, incorrect installation and negligence resulting from

phenomena outside normal functioning shall be excluded from the warranty. BEINAT S.r.I. is not liable for possible damage, direct or indirect, to people, animals, or things; from product faults and from its enforced suspension of use.



Attention: in some countries of the European Union, the product is not included in the field of application of the National Law that applies the European Directive 2002/96/EC and therefore these countries have no obligation to carry out a separate collection at the "end of life" of the product



.

SG544 Sensor

Purchase date:

Lo styling è della b & b design

Stamp and signature of the dealer

Serial Number :

The Beinat S.r.I. following the targhet to improve its products, reserves the right to modify the technical features, aesthetic and functional any time without prior notice

BEINAT S.r.I. Via Fatebenefratelli 122/C 10077, S. Maurizio C/se (TO) - ITALY Tel. 011.921.04.84 - Fax 011.921.14.77 http:// www.beinat.com

